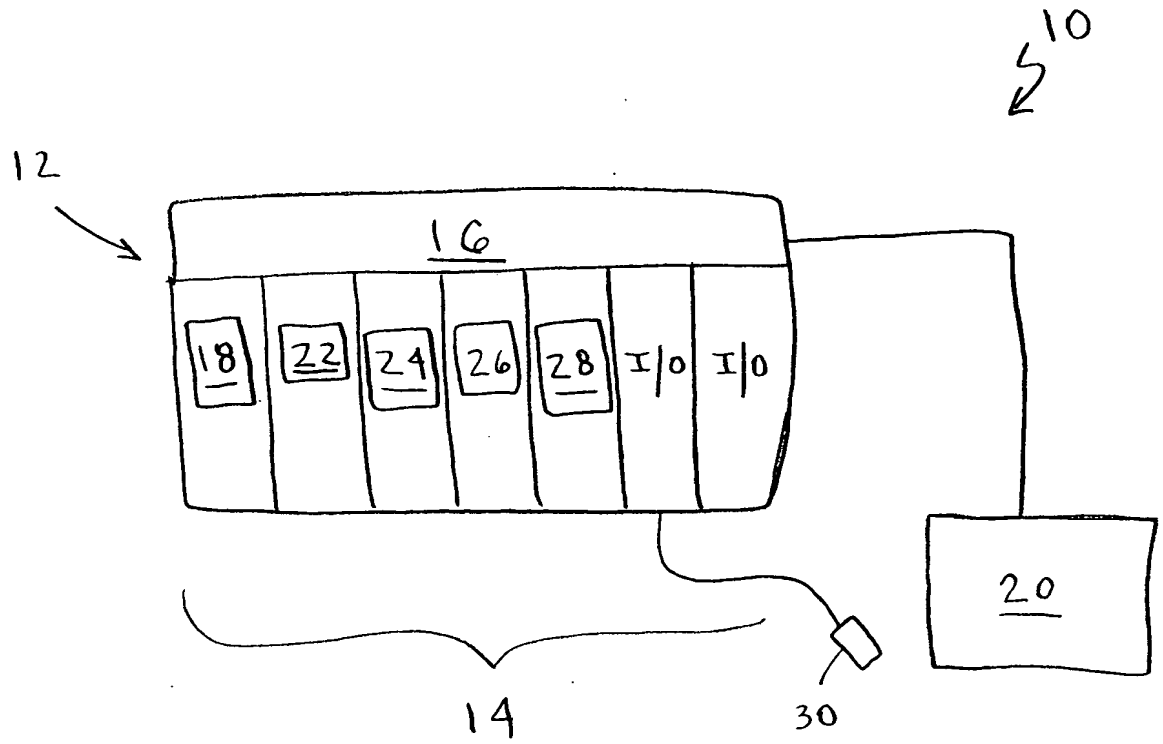

FIG. 1

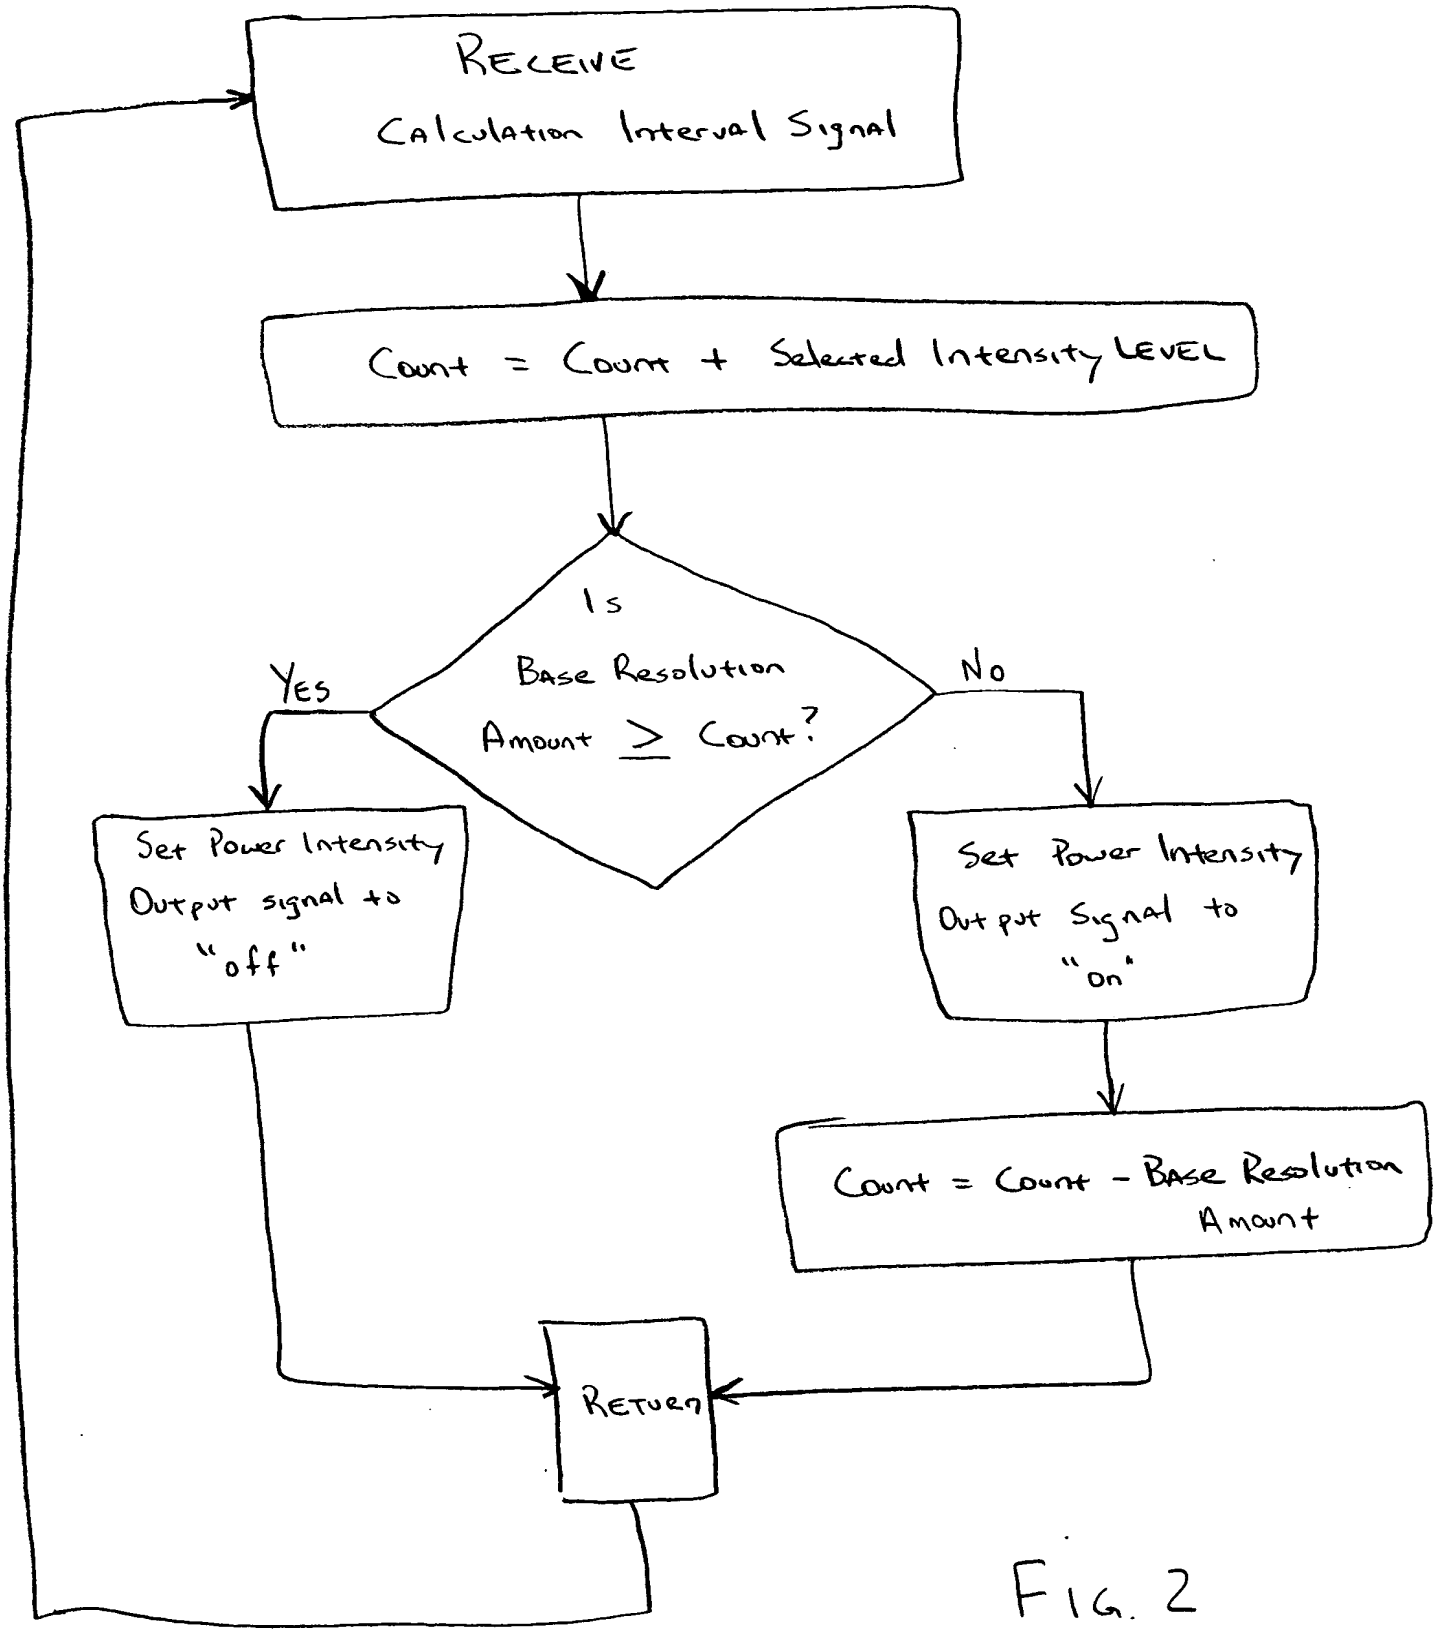
RECEIVE
Calculation Interval Signal
Count = Count + Selected Intensity LEVEL
Is
Base Resolution
Amount ≥ Count?
YES
NO
Set Power Intensity
Output signal to
"off"
Set Power Intensity
Output Signal to
"on"
Count = Count - Base Resolution
Amount
RETURN

FIG. 2

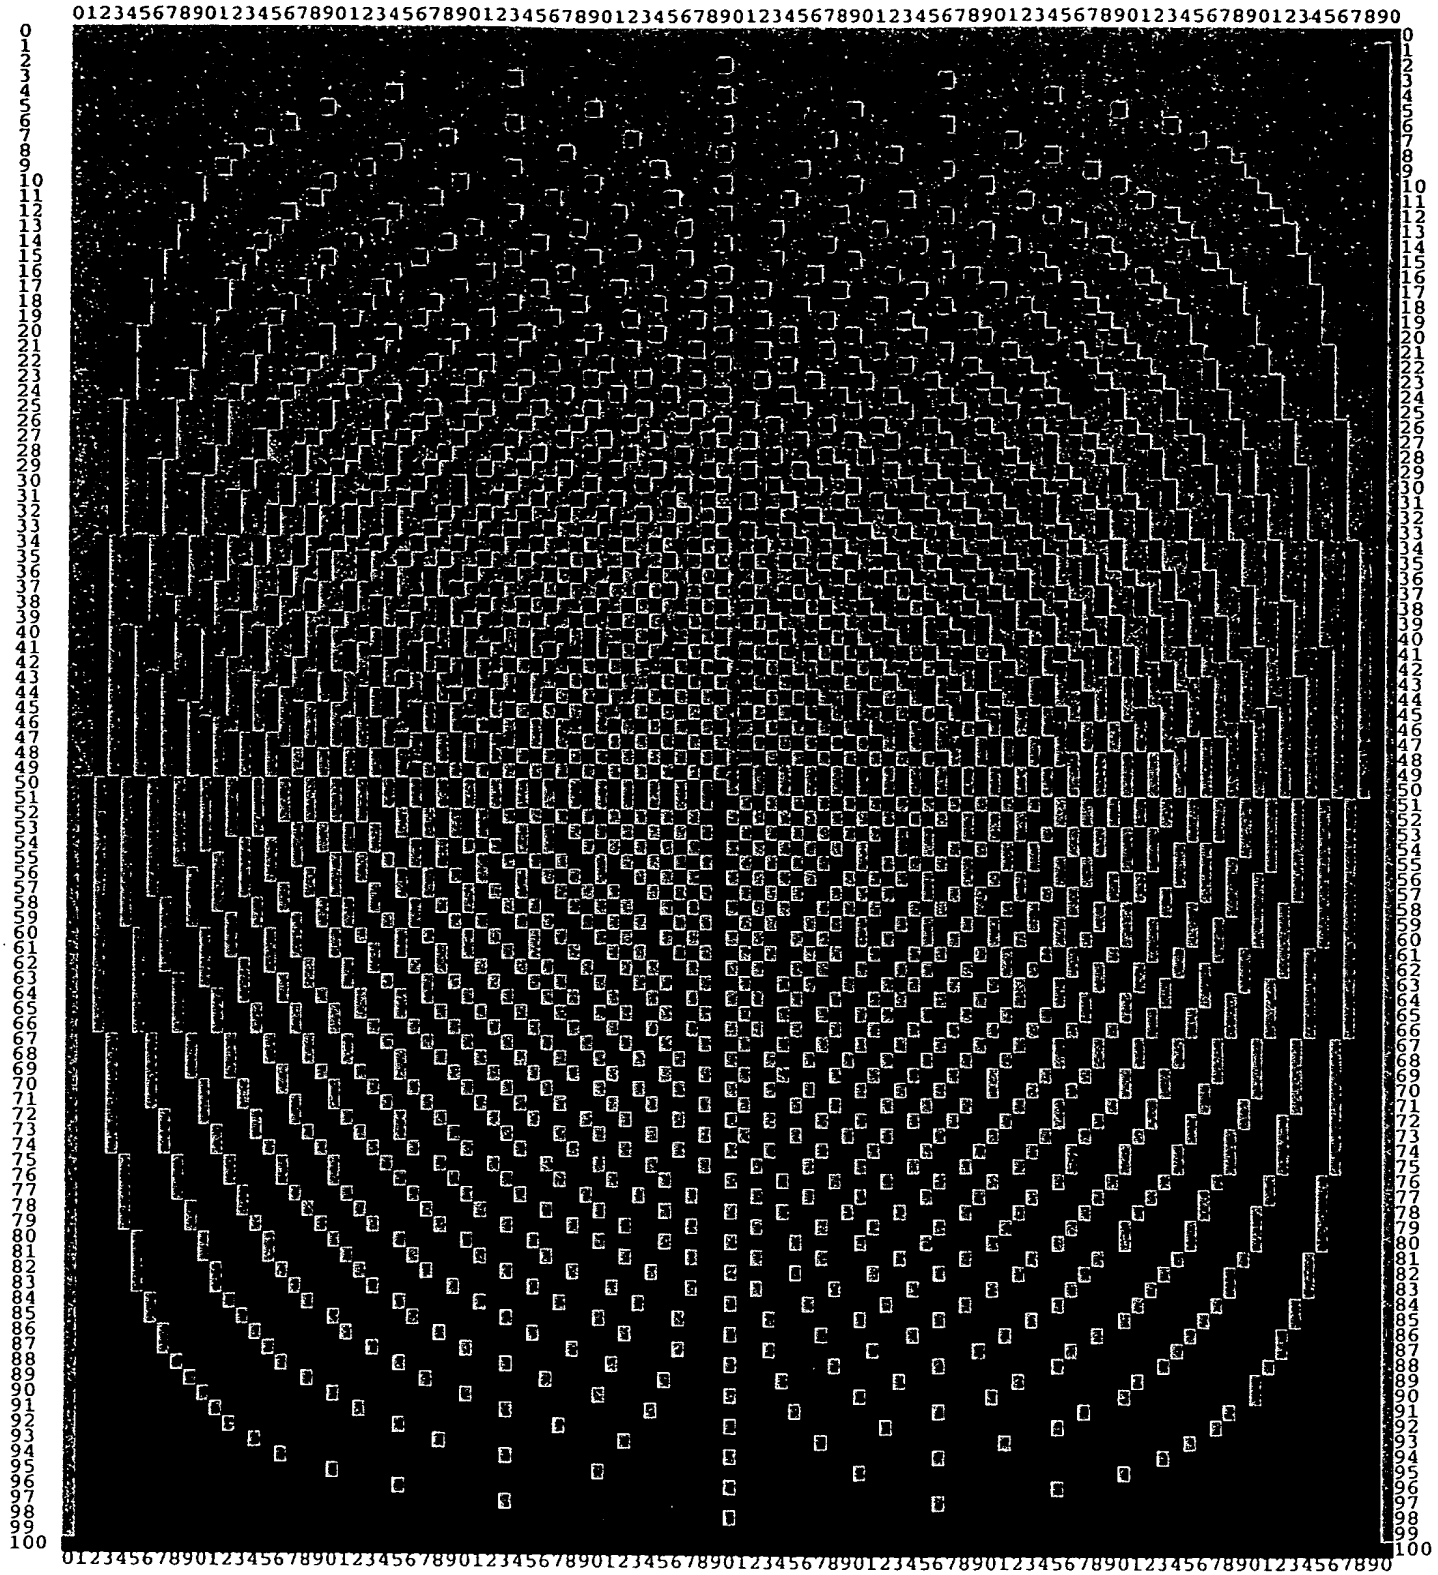

Calculation Interval

Base Resolution = 100

Fig. 3